




COOKTOP PARTS

For Models: RF114PXSQ1, RF114PXS B1, RF114PXST1
(Designer White) (Black) (Designer Biscuit)

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE

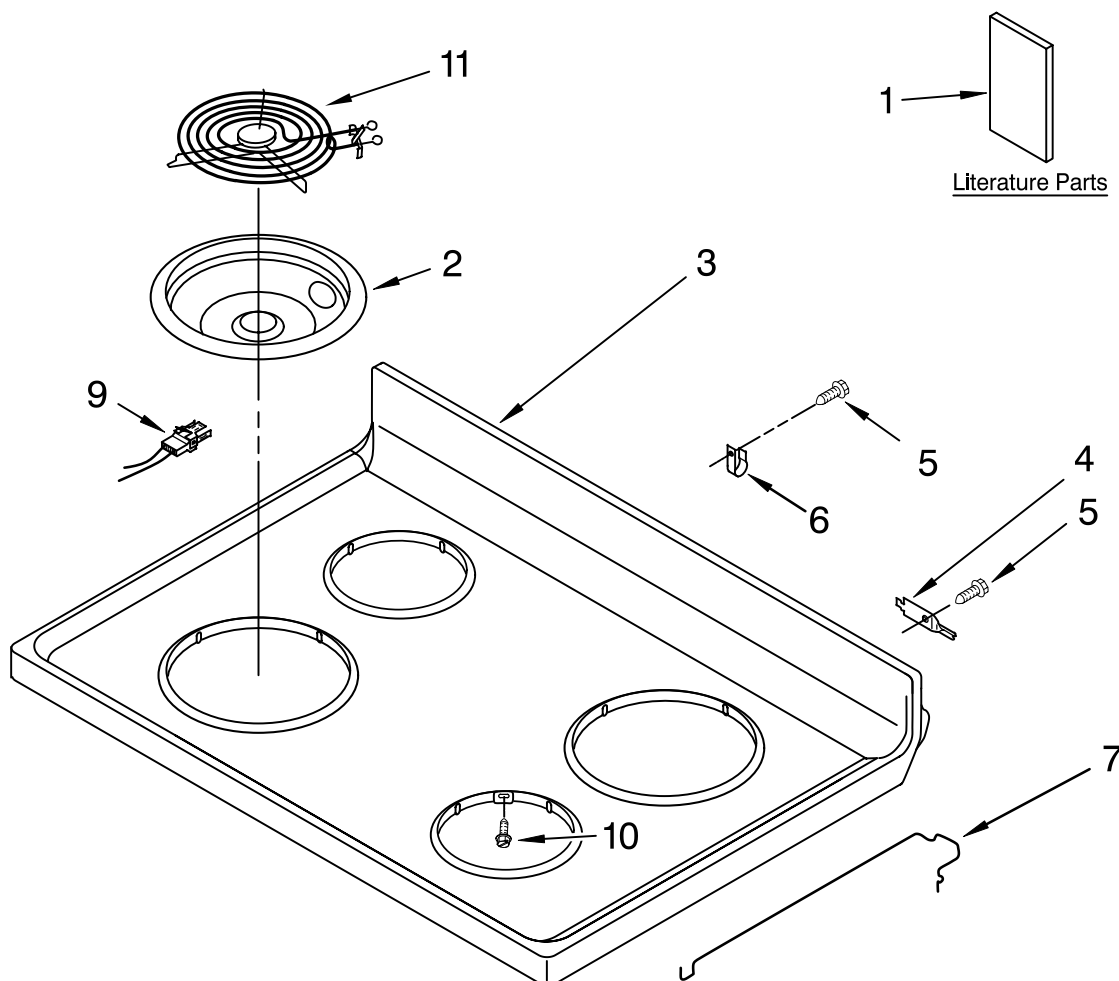

Illus. No.	Part No.	DESCRIPTION
1	9763001	Literature Parts
	W10115597	Owners Manual
	9762996	Tech Sheet
		Instructions, Installation
		Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	3195208	Bowl, Drip
	3195209	6" Chrome (2)
		8" Chrome (2)
3	3186231	Cooktop
	8272527	White
	3186233	Biscuit
		Black
4	3195060	Hinge, Cooktop (2)

Illus. No.	Part No.	DESCRIPTION
5	3196178	Screw
6	308605	Strain Relief
7	3195812	Rod, Support (2)
9	814399	Receptacle, Elmnt
10	3196154	Screw
11		Element, Surface
	9761347	6" (2)
	9761345	8"(2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF114PXSQ1, RF114PXSB1, RF114PXST1
(Designer White) (Black) (Designer Biscuit)

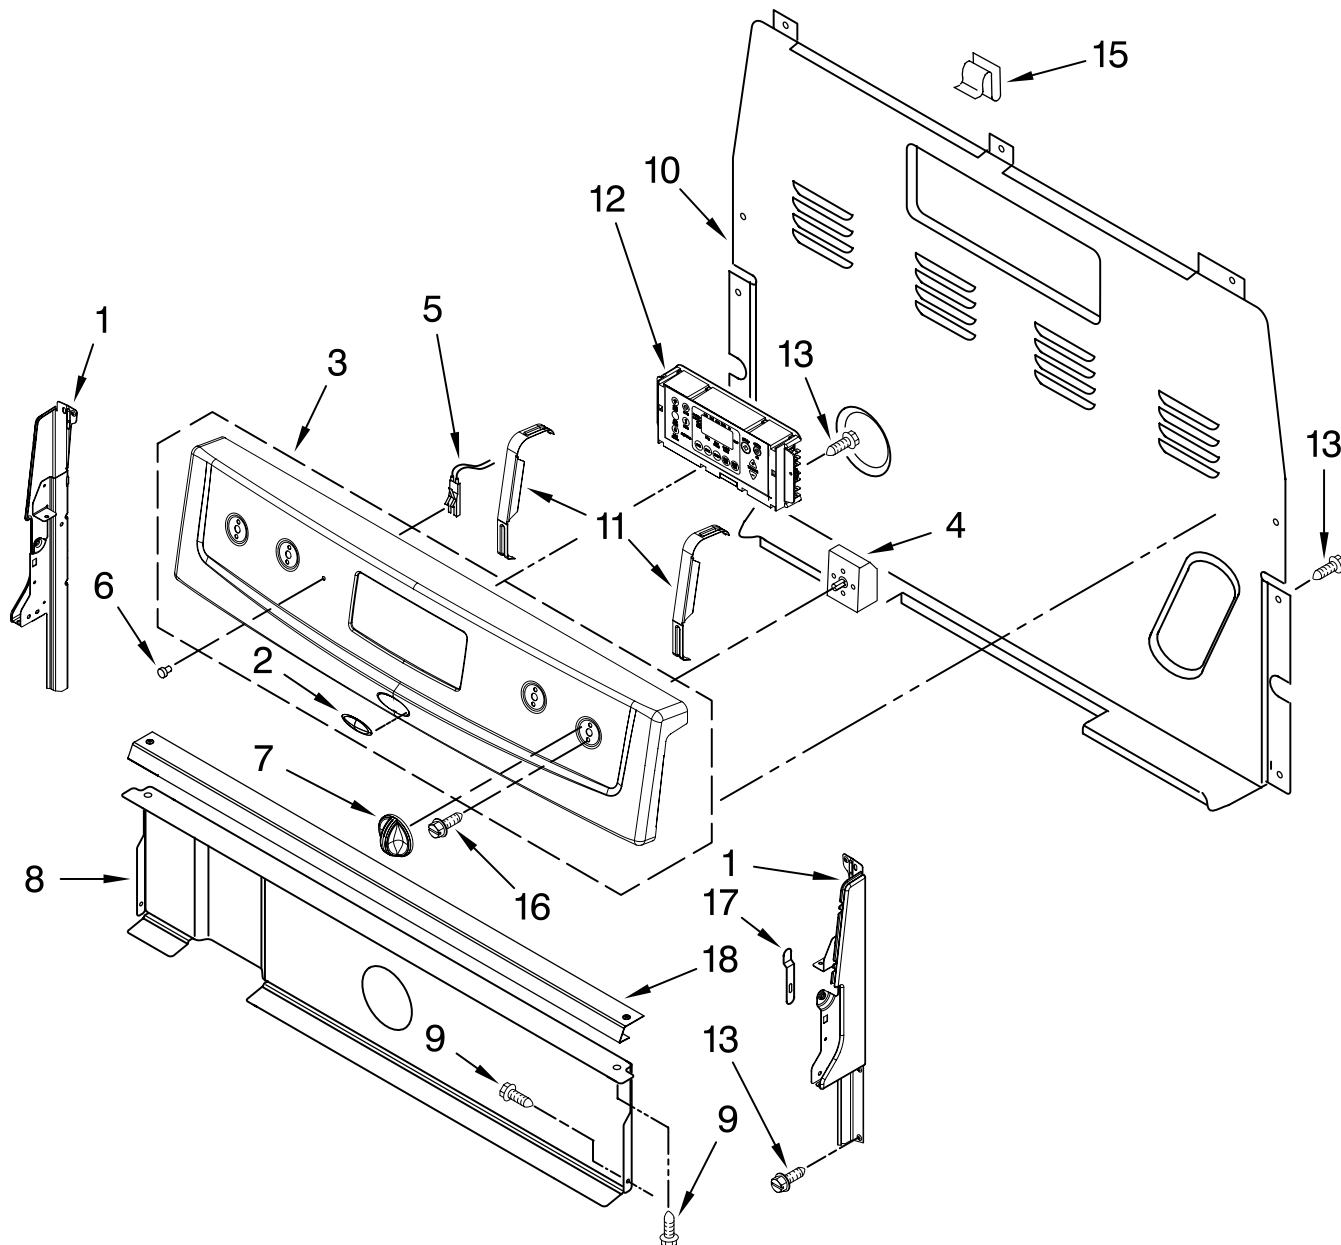

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009080	Black Left Hand
	W10009090	Black Right Hand
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
2	9757609	Nameplate
3		Panel, Console
	9762017	Black
	9762015	White
	9762016	Biscuit


Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148954	Left Front
	3148952	Left Rear
	3148954	Right Rear
	3148952	Right Front
	3400882	Screw (8)
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9761964	Black
	9761962	White
	9761963	Biscuit

Illus. No.	Part No.	DESCRIPTION
8	8053912	Shield, Heat
9	3196166	Screw
10	8272473	Cover, Upper
11	9762078	Brkt-Mntg, EOC
12		Control, Range
	W10108290	Black
	W10108280	White
	W10108300	Biscuit
13	3196178	Screw
15	8273564	Clip
16	3400882	Screw
17	3196200	Clip, Spring (2)
18	9762095	Brkt-Mntg, Console

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF114PXSQ1, RF114PXSb1, RF114PXST1
(Designer White) (Black) (Designer Biscuit)

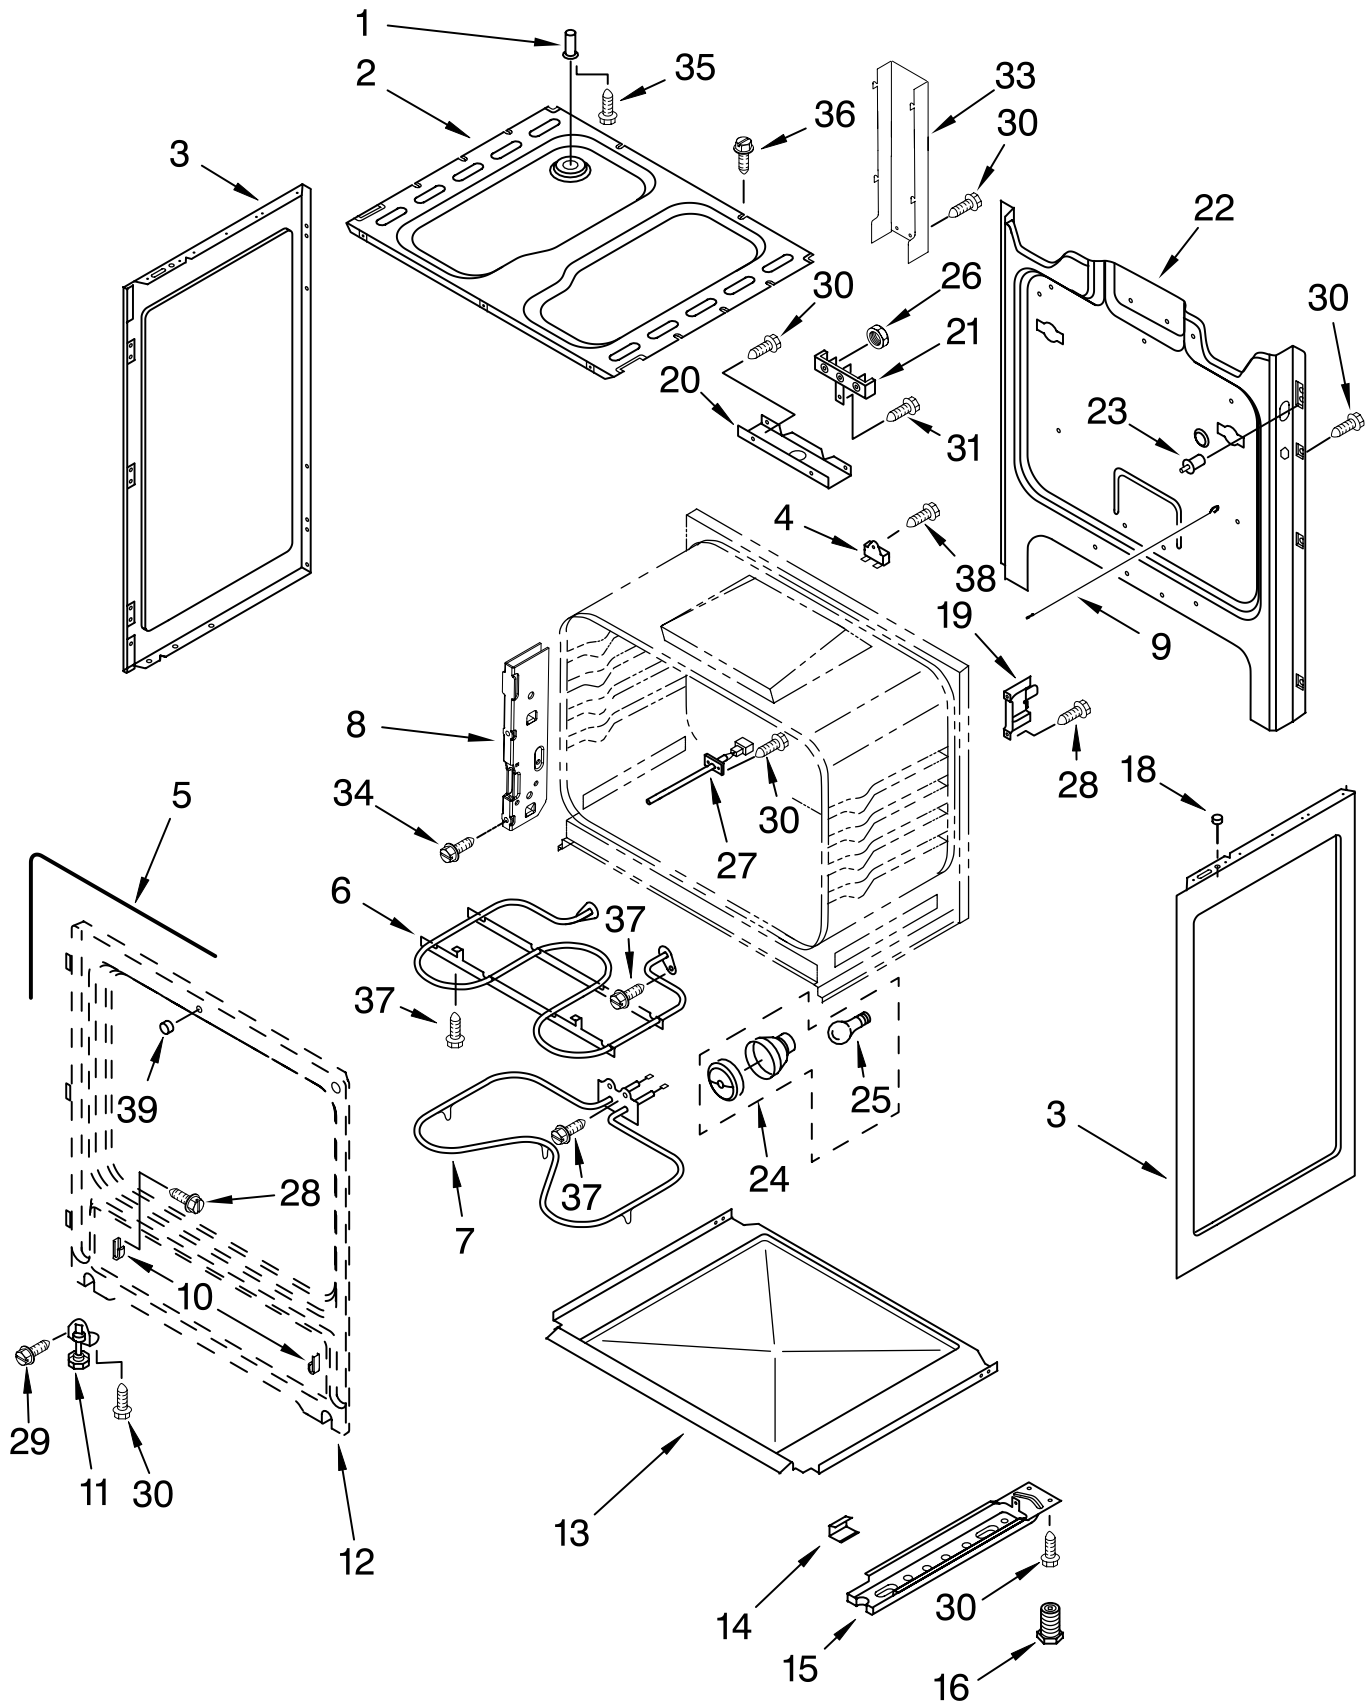

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF114PXSQ1, RF114PXSb1, RF114PXST1
(Designer White) (Black) (Designer Biscuit)


Illus. No.	Part No.	DESCRIPTION
1	3169143	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
	8272519	Biscuit-Textured
	8053832	Black-Textured
4	3196548	Fuse, Thermal
5	3186152	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9760407	Brkt-Mounting
9	9757239	Rod, Door Switch
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front (Non-Serviceable)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	112432	Nut (3)
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
33	9758283	Cover, Box
34	W10031780	Screw
35	3196567	Screw
36	3196168	Screw
37	3196174	Screw
38	3196172	Screw
39	9758701	Spacer, Door

INSULATION

8273263 Insulation, Wrap
8272611 Insulation, Back

DRAWER & BROILER PARTS

For Models: RF114PXSQ1, RF114PXSB1, RF114PXST1
(Designer White) (Black) (Designer Biscuit)

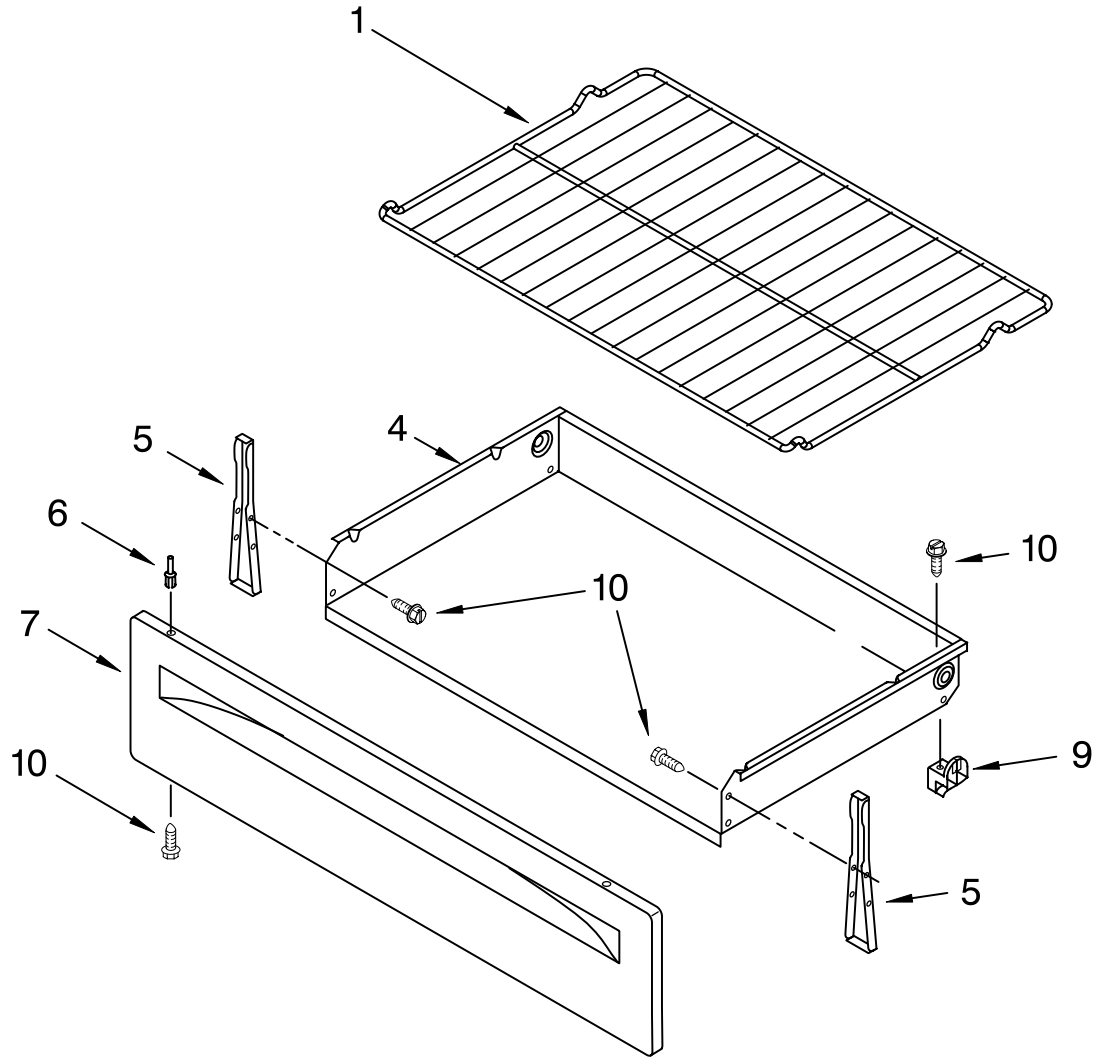


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF114PXSQ1, RF114PXSBI, RF114PXST1
(Designer White) (Black) (Designer Biscuit)

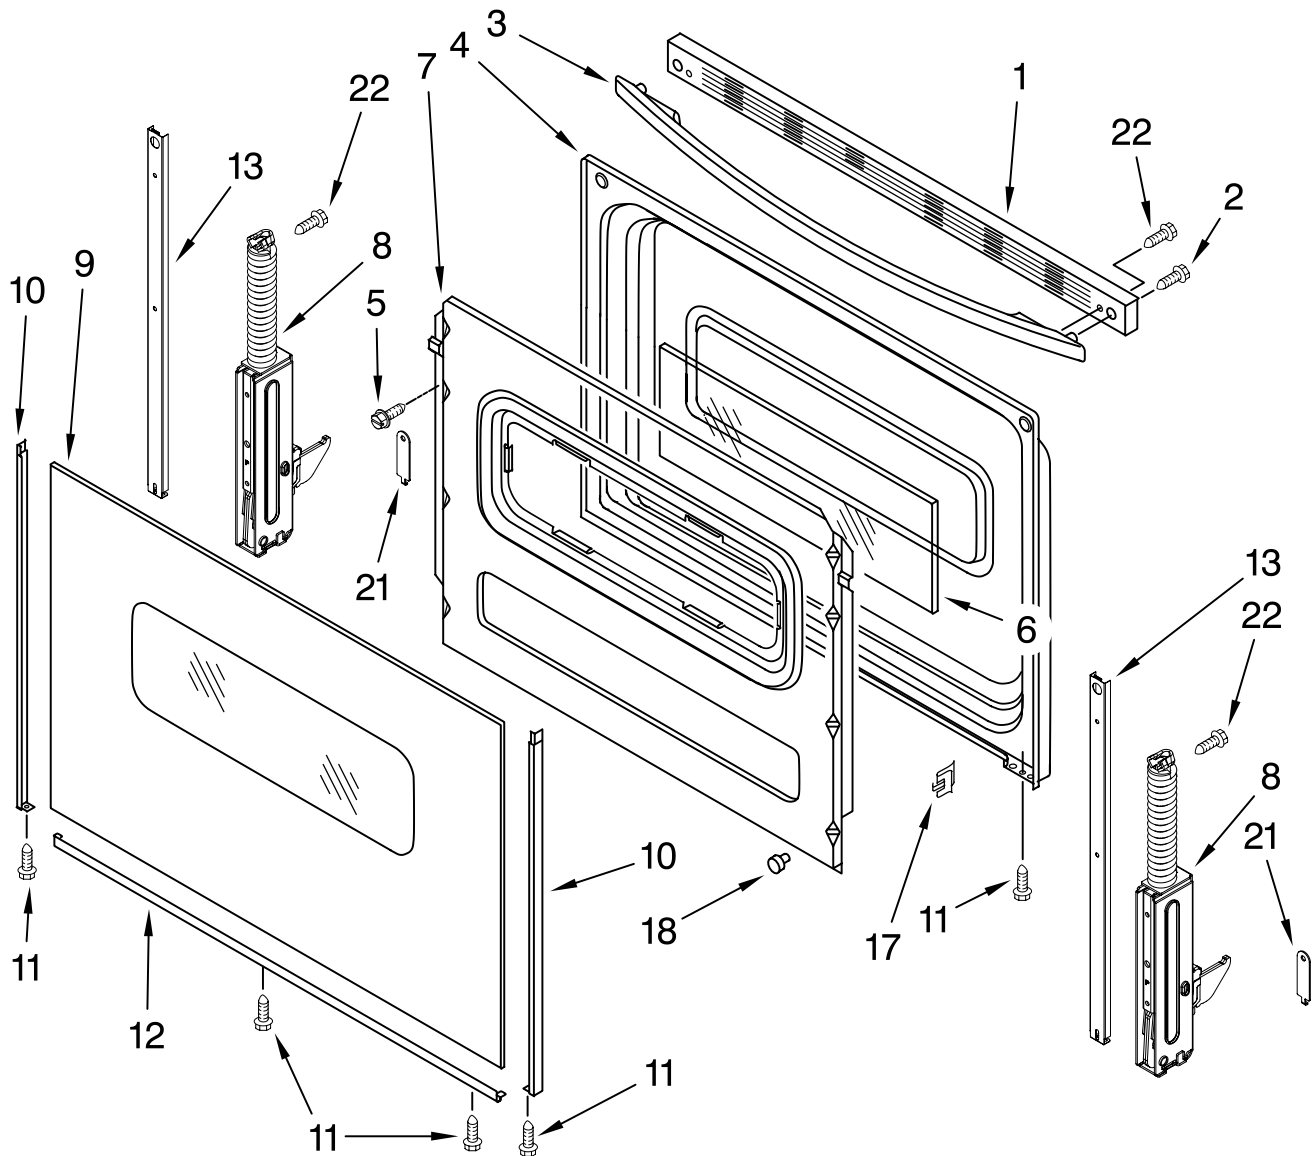

Illus. No.	Part No.	DESCRIPTION
1	9762391	Trim, Top
	9761975	Black
	9761976	White
2	3196164	Screw
3		Handle, Door
	9761983	Black
	9761982	White
	9761984	Biscuit
4	9761340	Liner, Door
5	W10031790	Screw

Illus. No.	Part No.	DESCRIPTION
6	9758163	Window, Inner
7	9761500	Retainer, Insul.
8	9761494	Hinge, Door (2)
9	9762477	Black
	9762476	White
	9762478	Biscuit
10		Trim, Side
	8523171	Black Left Hand
	8523165	Black Right Hand
	8523172	White Left Hand
	8523166	White Right Hand
	8523173	Biscuit Left Hand
	8523167	Biscuit Right Hand

Illus. No.	Part No.	DESCRIPTION
11	3196160	Screw
12		Trim, Lower
	8523177	Black
	8523175	White
	8523178	Biscuit
13	W10113759	Strap, Door
17	3196025	Clip, Glass (6)
18	3195809	Bumper, Door (2)
21	9761517	Clip, Dr Mntg (2)
22	3196165	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF114PXSQ1, RF114PXSB1, RF114PXST1
(Designer White) (Black) (Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)			INSULATION			ACCESSORY PARTS		
<u>SPLICING WIRES--25FT. LENGTH</u>			261514 Insulation, Fiberglass (1-1/2" x 24" x 120")			241430 Foil, Aluminum Oven (18" x 25')		
242828 Wire, Black 12 Ga. 150° c			240132 Insulation, Fiberglass (2-1/2" x 22" x 120")			3184478 Cleaner, Glass		
242821 Wire, Blue 14 Ga. 150° c			<u>PAINT, TOUCH-UP (1/2oz.)</u>			<u>ANTI-TIP KIT</u>		
242822 Wire, Brown 14 Ga. 150° c			72017 White			W10017440 Anti-Tip Kit		
242830 Wire, Brown 14 Ga. 200° c			72107 Almond			<u>WIRING HARNESS PARTS</u>		
242823 Wire, Green 14 Ga. 150° c			4392899 Biscuit			9761476 Harness, Wire (Cooktop)		
242824 Wire, Orange 14 Ga. 150° c			511873 White Porcelain (2 Oz.)			W10083480 Harness, Wire (Main)		
242825 Wire, Red 14 Ga. 150° c			<u>PAINT, PRESSURIZED SPRAY (12 oz.)</u>			311227 Wire, Ground		
242831 Wire, Red 14 Ga. 200° c			350930 White			3196154 Screw		
242827 Wire, Yellow 14 Ga. 150° c			350956 Almond			W10083650 Harness, Wire (Sensor/Dr Switch)		
<u>REFINISHING MATERIAL</u>			4392901 Biscuit			3196696 Clip, Harness		
799832 Kit, Porcelain Repair (White)			285006 Superior Black			3196174 Screw (Grnd / Main Back)		
242756 Touch-Up Self-Clean(1/2 Pt)			206922 Primer (White)			313660 Clip, Wire Ground		
261582 Grease			<u>PAINT, BULK (1 qt.)</u>			3196173 Screw		
			799344 White (Uncut)			<u>Miscellaneous</u>		
			978883 Almond (Uncut)			3196897 Pin Kit-Dr Removal		
			4392900 Biscuit (Uncut)					

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST